

CHRISTMAS DOUBLE SPIRAL TREE

INSTRUCTIONS





CONTENTS

01 Disclaimer

01 Warranty

02 Warning

02 Specifications

03 Package
Contents

05 Assembly
Instructions

09 Remote Control
Instructions

11 Troubleshooting



DISCLIMER

Dear customer, these instructions are suggested installation procedures only, they do not constitute professional installation and may not necessarily meet all electrical requirements in your state.


The power adapter which covered by ETL report is not intended to be field cutting or splicing.

The controller device does not use old and new batteries together. Remove the batteries when the remote control is not used for a long period. The recommended effective period of a battery conforming to IEC should be 6 to 12 months with normal use. If used longer, or when an unspecified battery is used, liquid may leak from the battery, causing the remote control to malfunction.


WARRENTY

All of our products are warranted against defects in materials and workmanship for a period of one year from the date of original purchase. We provide 1 month hassle-free full refund, 6 months moneyback or free replacement and 12 months limited warranty.

WARNING

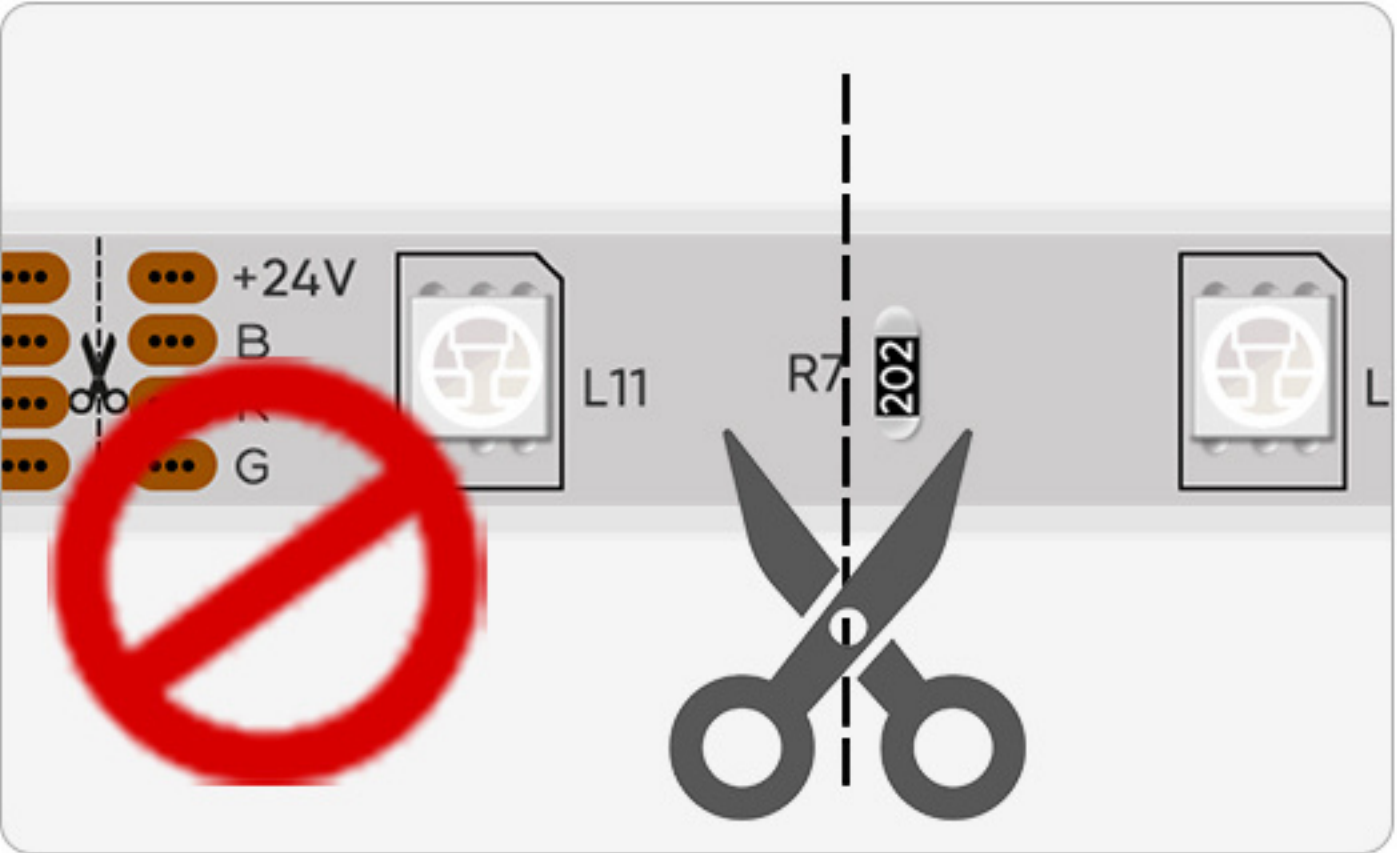


1. Do not cut or extend the light strip.

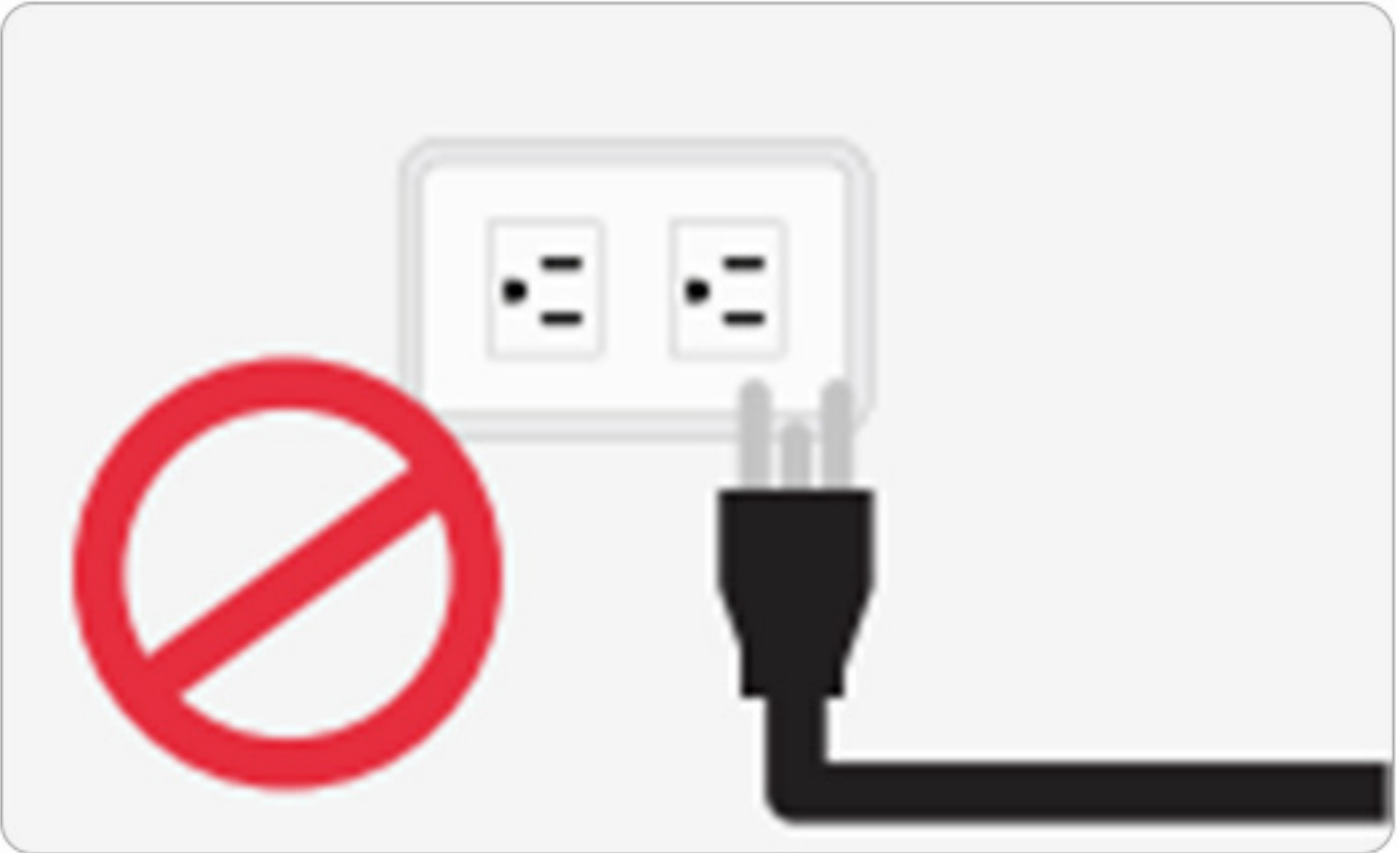

2. Unplug the light before installation.





3. Unroll the light before lighting it up. Or else it might melt the rope light and even cause a fire.

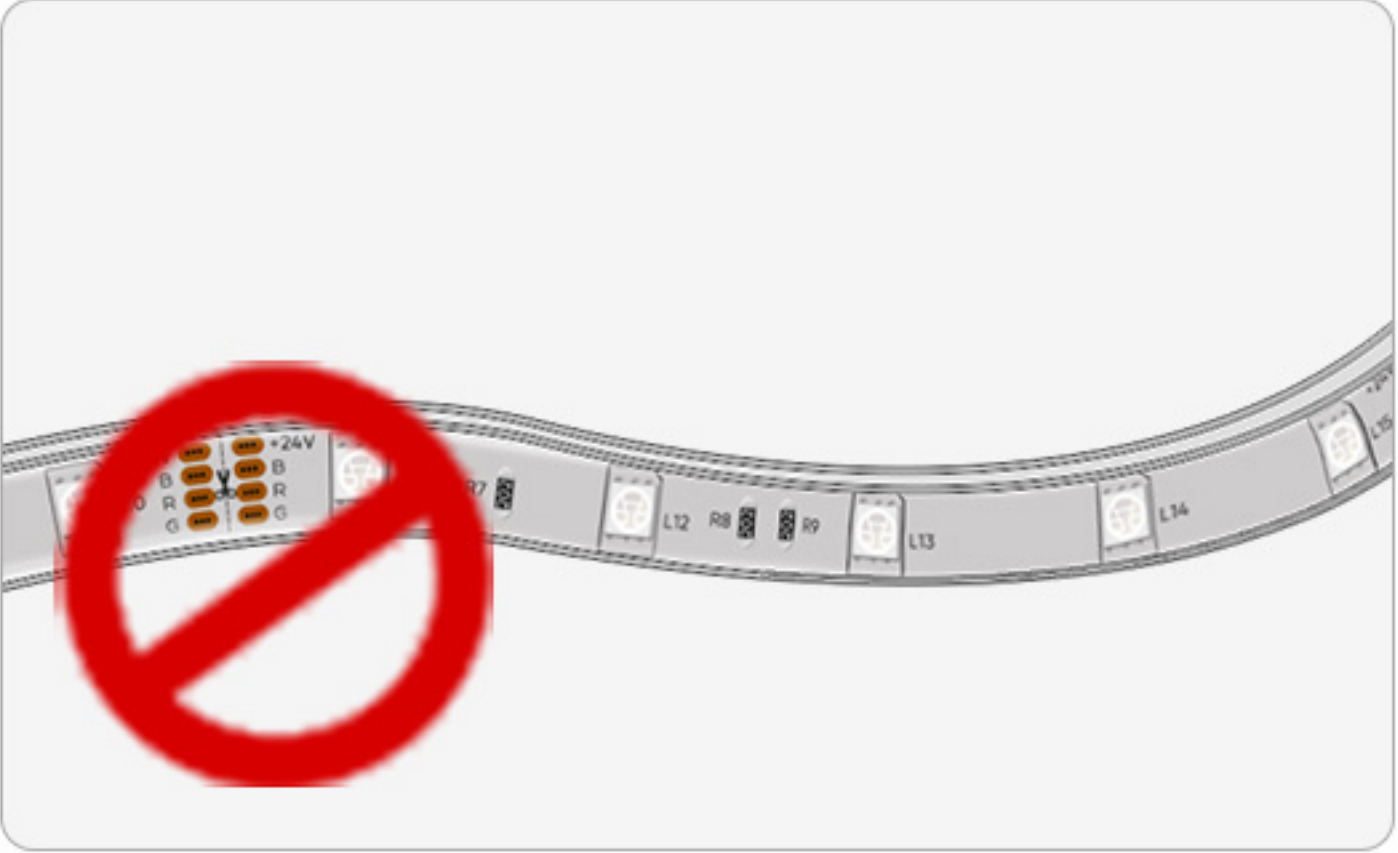

4. Do not pull on or stretch strip light.


SPECIFICATIONS

Over Height	Color	Input Voltage	Output Voltage	SIZE	Jacket Material	LED Quantity	IP Rating	Power adapter Certification
3FT	RGBIC	120VAC	24VDC	12*6mm	PVC	133	IP65	ETL Listed
5FT	RGBIC	120VAC	24VDC	12*6mm	PVC	252	IP65	ETL Listed
7FT	RGBIC	120VAC	24VDC	12*6mm	PVC	364	IP65	ETL Listed

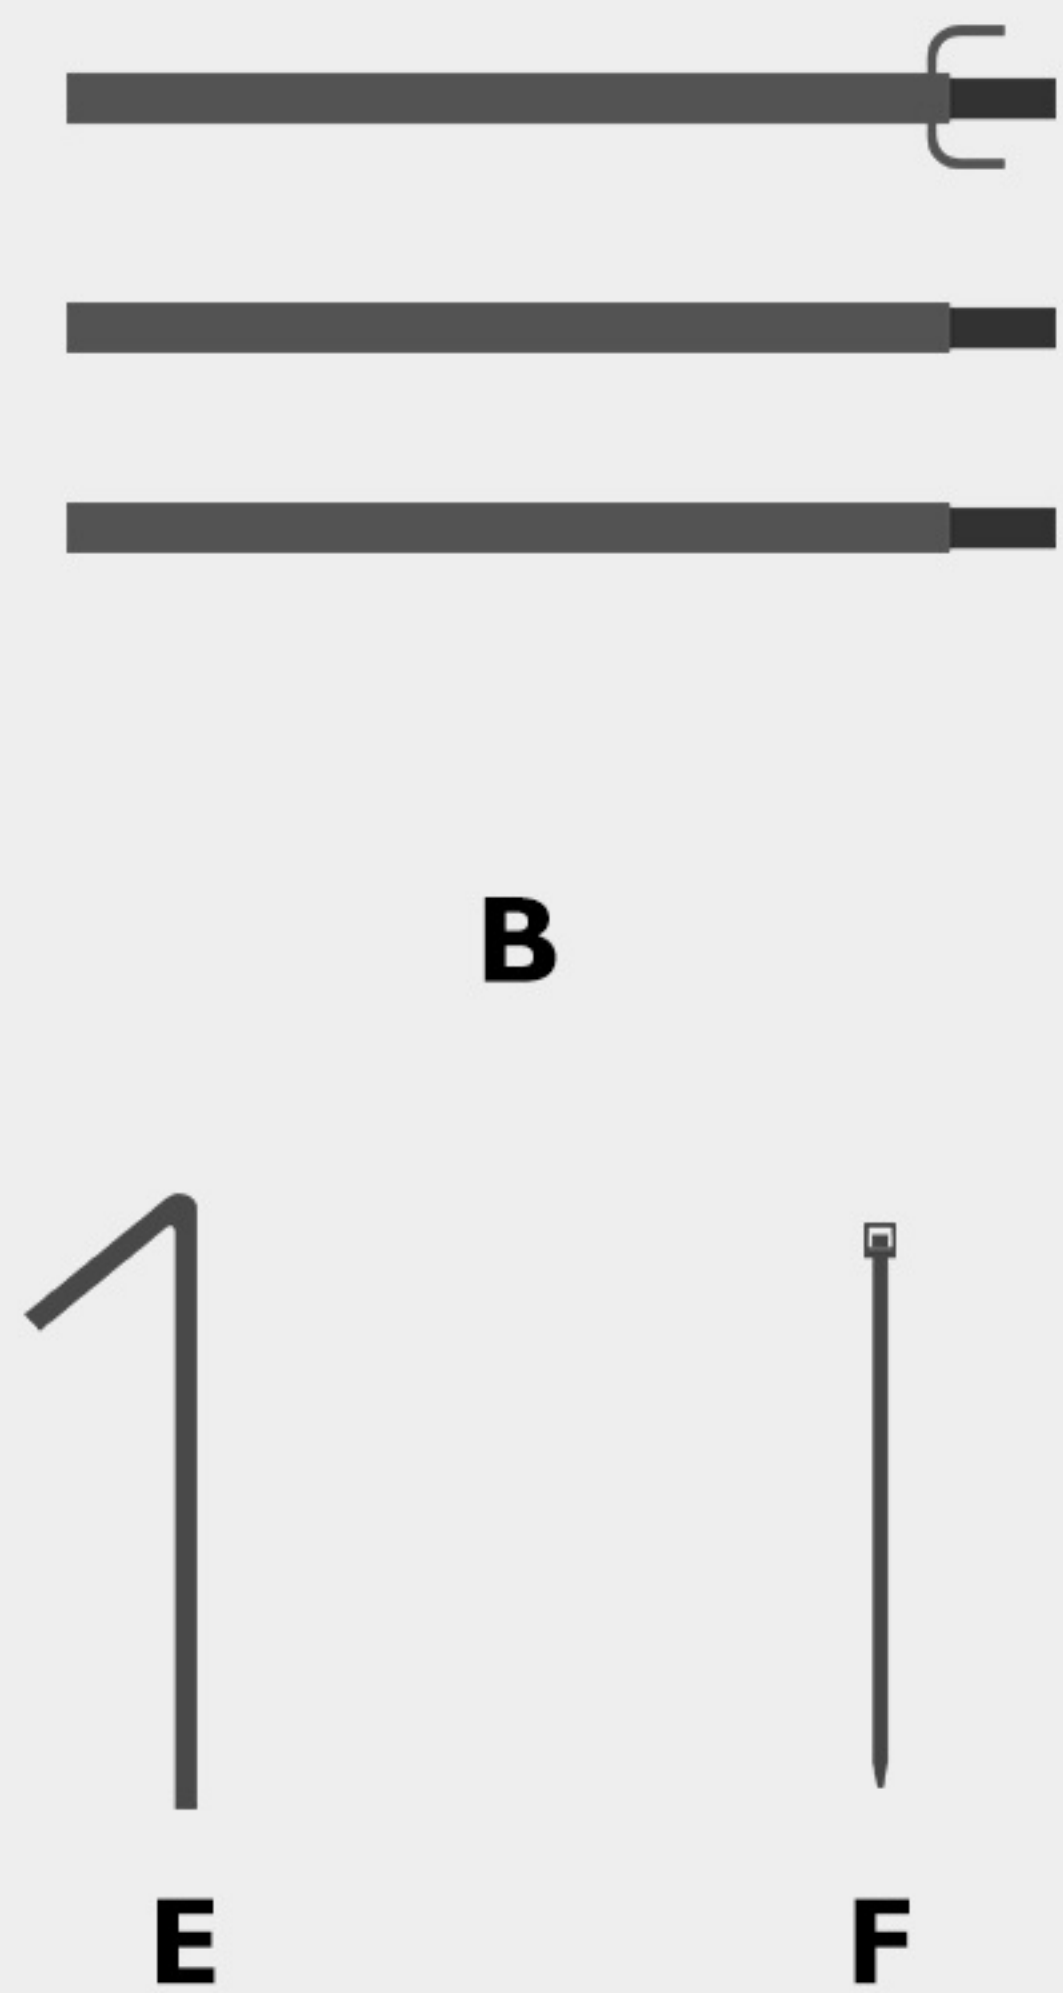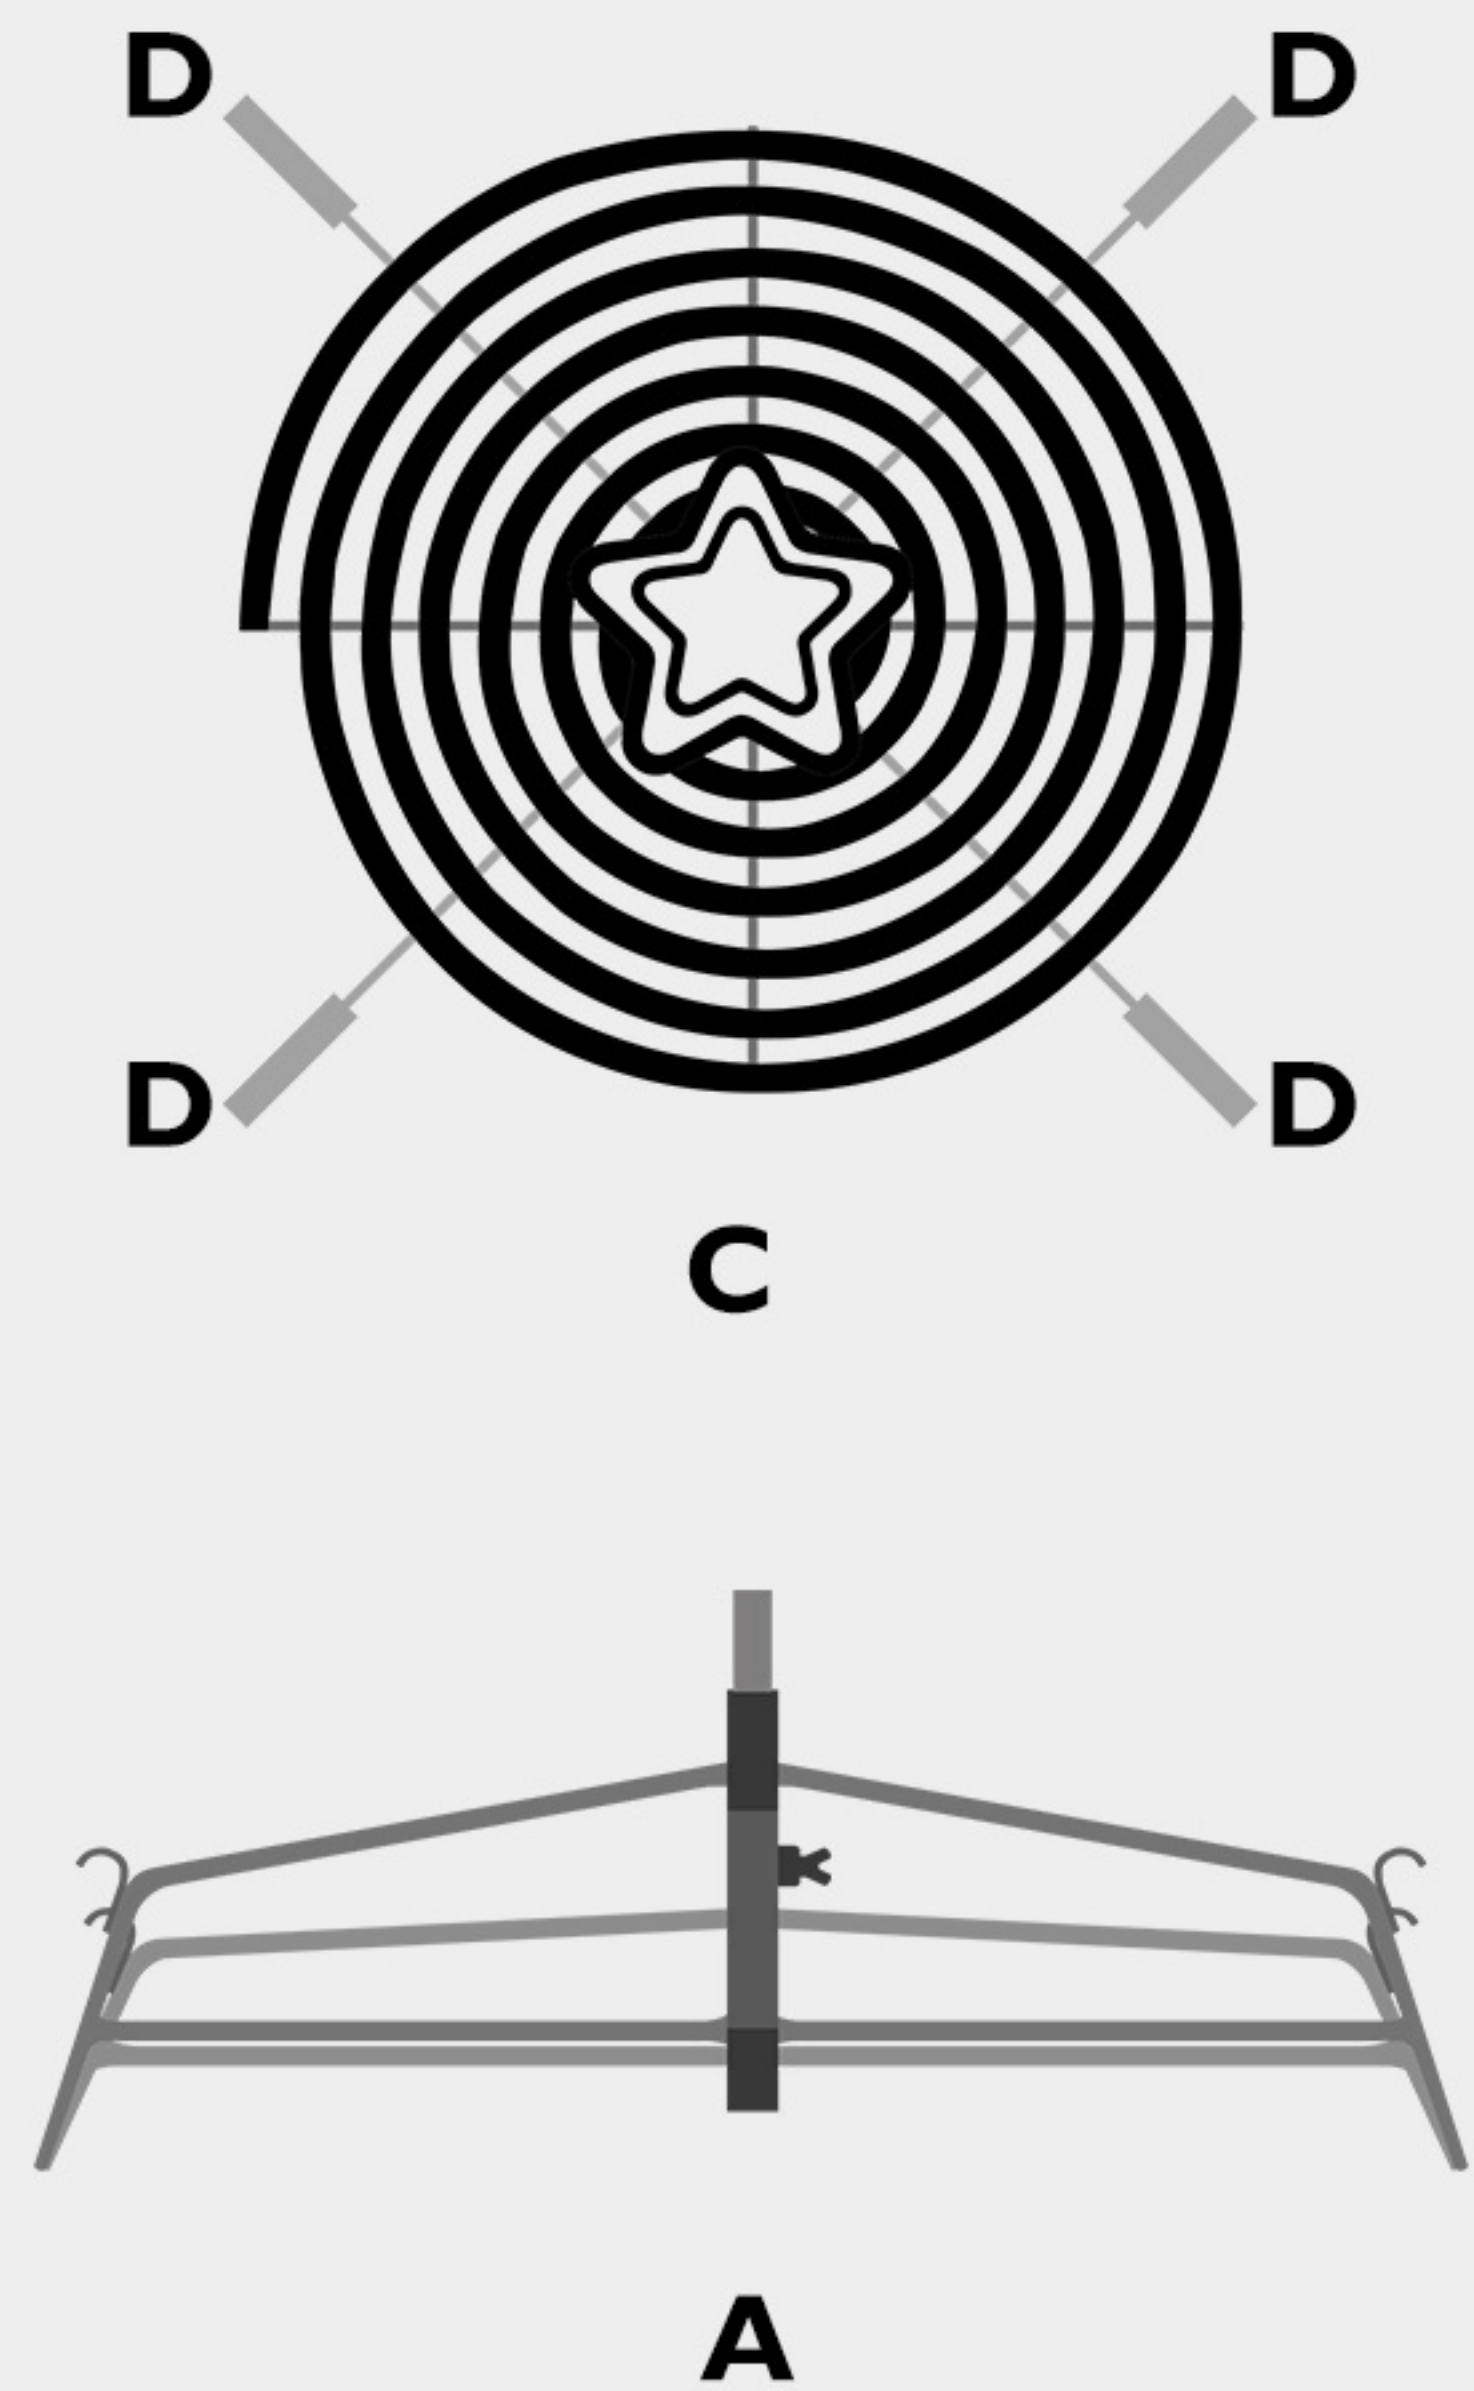

PARTS LIST

NO.	NAME	QTY
A	Stand Base	1
B	Support Pole (2pcs for 3FT)	3
C	Tree Topper Star & Spiral Tree	1
D	Hook(Pre-attach in spirial tree)	4
E	Ground Stake	4
F	Tie	10
G	Remote control	1

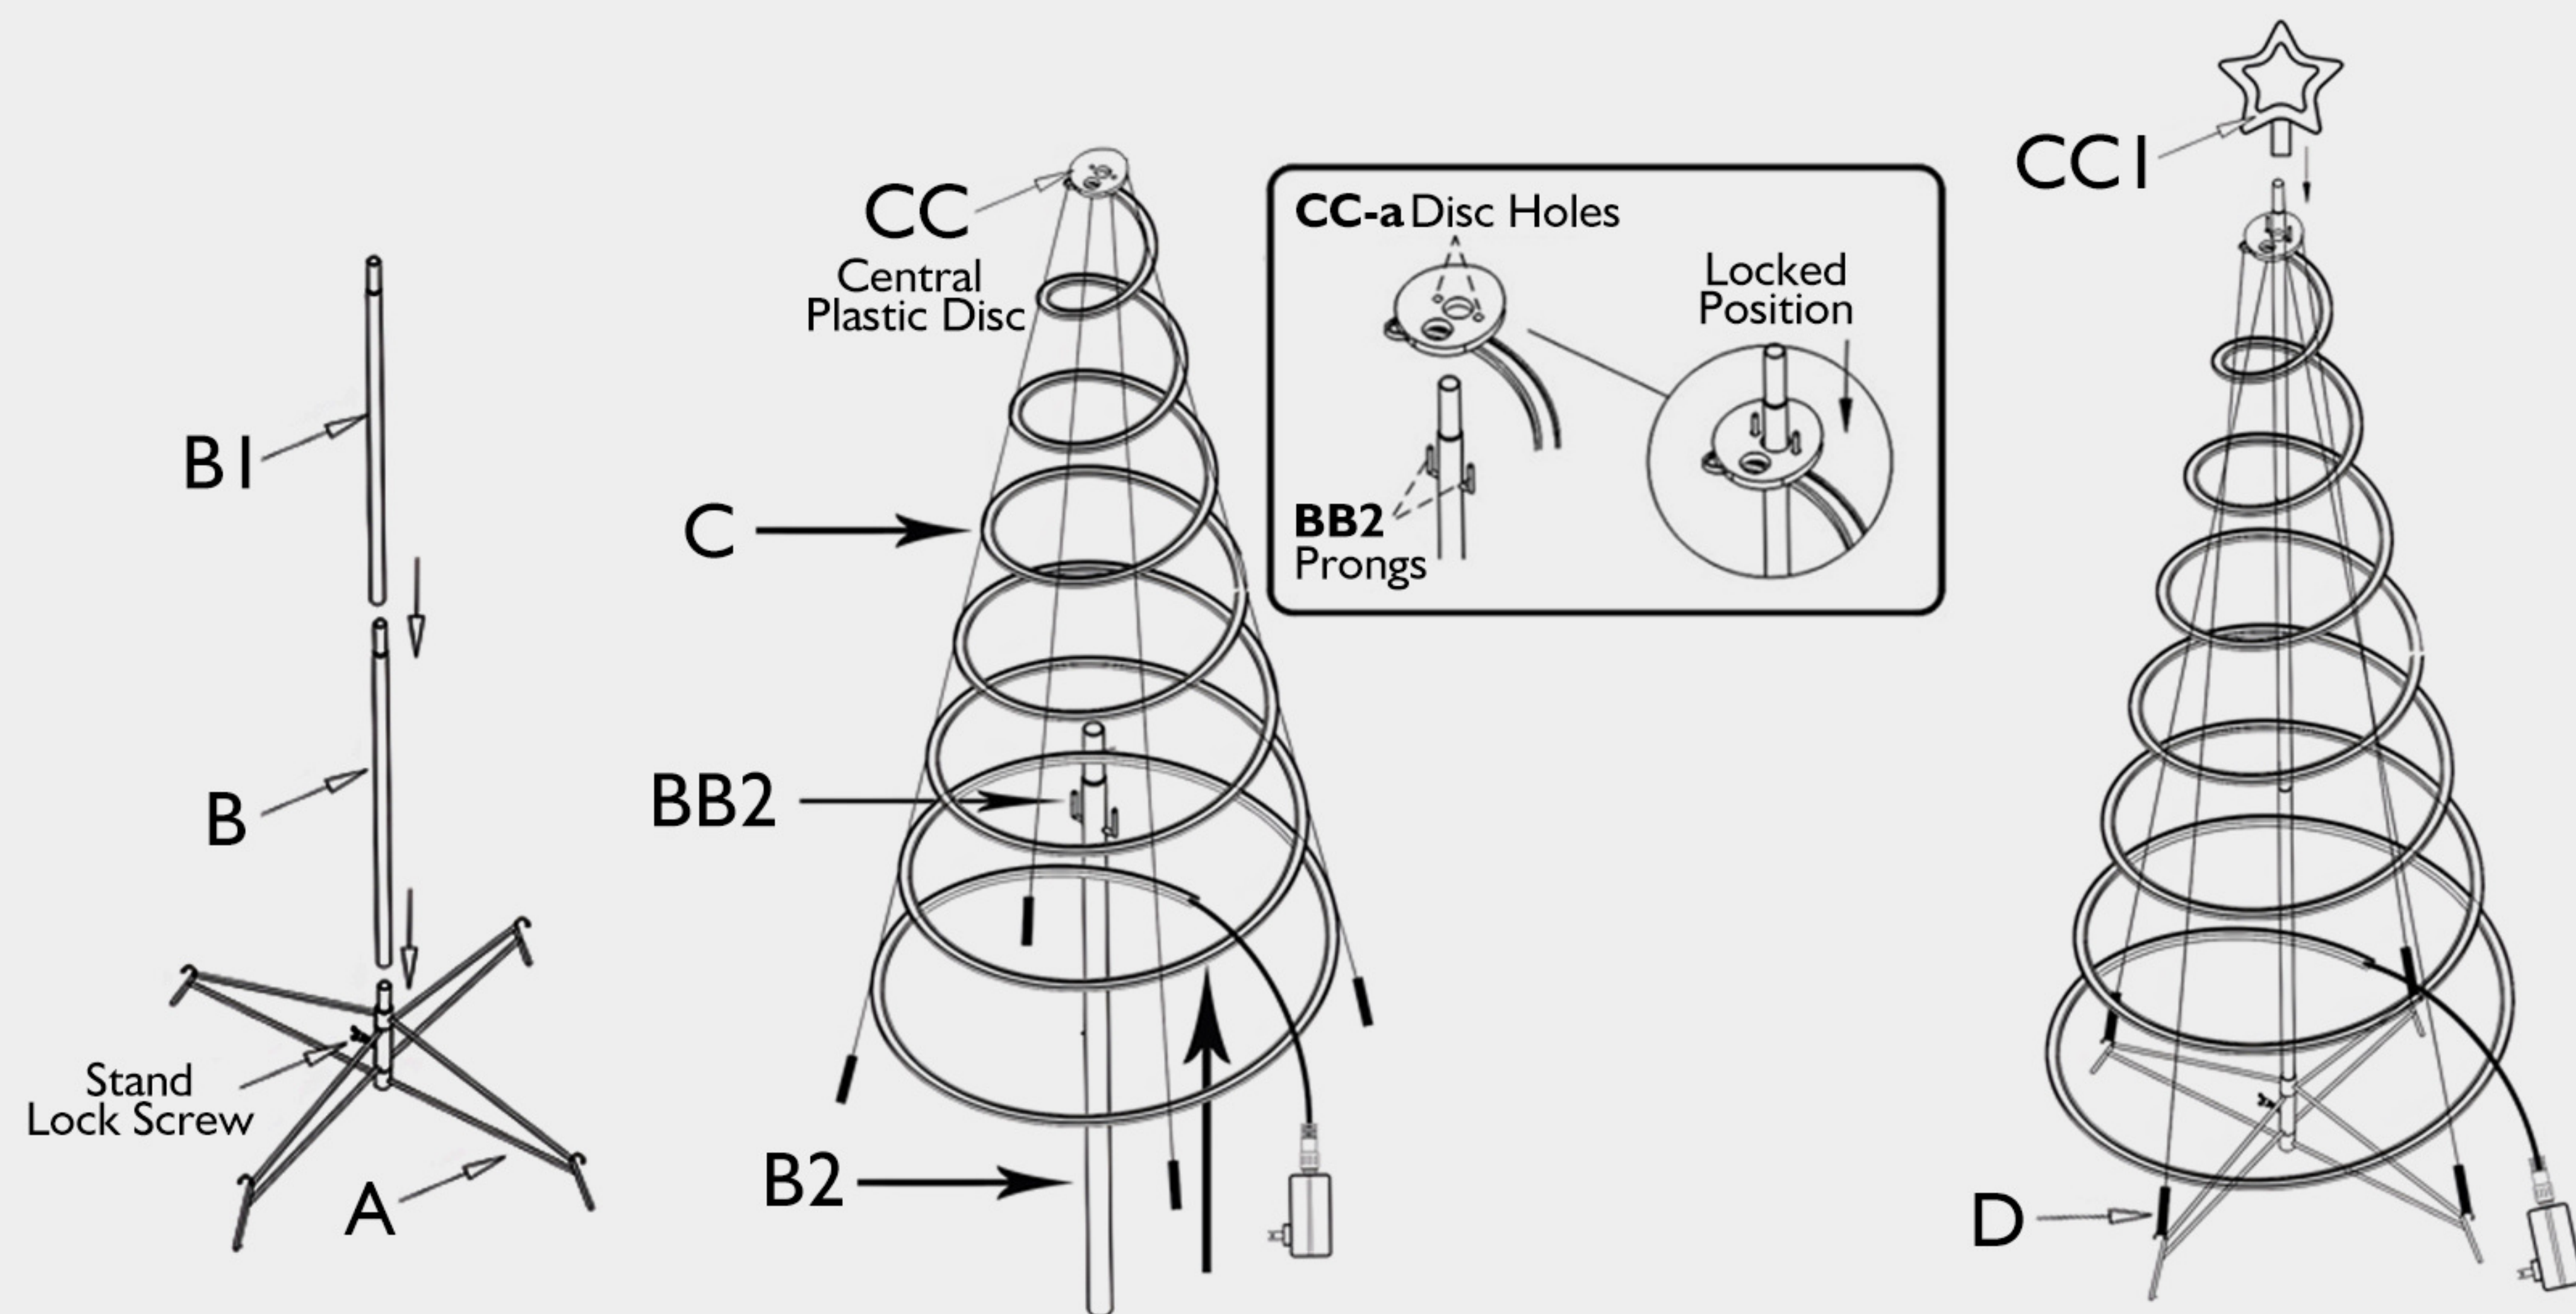

Step 1: Carefully remove all parts and check against PARTS LIST;

Step 2: Spread open metal stand (A) and tighten stand lock screw on base to lock into open position;

Step 3: Insert support pole of Central Pole Supports, one into the other to their full height following the right order of construction (B&B1);

Step 4: Insert the support pole with prongs (B2) to LED strip and join Central Plastic Disc(CC) on plastic spiral tree coils directly onto prongs(BB2) on top of Central Pole(CC-a) (see insert);

Step 5: Line up tree topper(CCI) and insert on top of Central Pole;

Step 6: Connect the support pole(B2) to the support pole(B1) on the base

Step:7: Line up tree topper star(CCI) and insert on top of Central Pole;

Step:8: Hook the hook(D) onto the hook on the base(A) to secure the tree body.

Step:9: Ground Stake into place if necessary;



TURN ON/OFF




COLOR TURNING
RED/YELLOW/GREEN/CYAN/BLUE/PINK/WHITE



ALL FUNCTIONS IN LOOP



M1 TO M8 CHANGE
PLAY PREVIOUS MODE/PLAY NEXT MODE

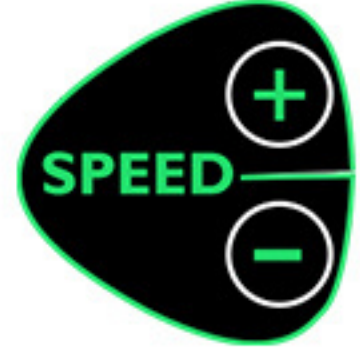

INCREASE/DECREASE FUNCTION SPEED



MODE1: RAINBOW-COLOR CHASING



MODE2:SHRINKING



MODE3:TWO-COLOR CHASING



MODE4:COLOR OVERLAY



MODE5:COLOR CROSSING



MODE6:TWINKLE



MODE7:FADE



MODE8:EIGHT-COLOR GRADIENT



Step I

Remove the battery cover on the back of the remote control.



Step I

Place 2 AAA batteries according to battery polarity.



Step I

Cover the battery cover.



Problem	Possible Cause	Solution
The entire light will not illuminate	Loose Connection	Pull out every connective part of the strip lights and firmly re-connect them.
	Incorrect Power Source	Please use the power adapter that we equipped. The input voltage must meet the voltage requirement of the lights, and the output power of the adapter must be equal to, or higher than the power of the LED strip light.
sections of light doesn’t illuminate	Manufacturing flaw or mechanical damage during shipping	Check if the sections do not light up when the light first arrives. Contact our support team in time for return.
	Incorrect bending during installation	Do not fold or stretch the rope lights. Do not bend the light to sharp angles or make repeated and continuous bending as this may damage circuit traces during installation.
Remote doesn’t work	Missing/ Dead Battery	Install a new R03/AAA battery inside the remote.
	Outside Sensing Range	Align the remote to the receiver of the controller for better signal.
	Obstacle	Remove any obstacles between the remote control and the receiver.
	Battery installed with reversed polarity	Should be inserted with correct polarity (+) and (-).